

STEP 1: FIRST SET UP



DoPchoice
PRODUCT INSTRUCTIONS &
SAFETY INSTRUCTIONS



LANTERN 5 FOR RABBIT EARS

OPERATING INSTRUCTIONS – BEDIENUNGSANLEITUNG



1.) We have packed the Lantern5 very compactly. To install it the first time please follow these instructions



2.) Take it out of the carry bag: There are 8 Pole extensions that need to be connected to the thin poles

SAFETY INSTRUCTIONS



dopchoice.com/instructions/



3.) Open the Lantern fully



4.) Connect the Extension to the pole



5.) Pull the rod extension 2 cm back into the elastic loop



6.) Repeat this for all 8 rods and you are ready for the first basic setup

Important: Please follow the general instructions how to set up the Lantern 5

STEP 2: GENERAL SET UP



DoPchoice
PRODUCT INSTRUCTIONS &
SAFETY INSTRUCTIONS



LANTERN 5 FOR RABBIT EARS GENERAL SETUP

OPERATING INSTRUCTIONS – BEDIENUNGSANLEITUNG



SAFETY INSTRUCTIONS



dopchoice.com/instructions/

1.) Take the Lantern 5 out of the Carry bag and align the backing

2.) Open all 4 Velcro attachments and 4 Zippers at the Backing. This will help you to set up the unit easily. Check if the rods are correctly attached into the Rod Extensions and that the steel inside the Lantern is properly aligned with the diffusion.



3.) Open the 2 top Rabbit Ears and start to install the 2 rod extensions into the Rabbit Ears

4.) With the Lantern hanging down you can start to install the other poles into the Rabbit Ears clockwise or counter-clockwise.



5.) It helps if you gently push the rods to the back of the housing so they slide easily into the Rabbit Ears insert hole.

STEP 2: GENERAL SET UP




DoPchoice
PRODUCT INSTRUCTIONS &
SAFETY INSTRUCTIONS



LANTERN 5 FOR RABBIT EARS GENERAL SETUP OPERATING INSTRUCTIONS – BEDIENUNGSANLEITUNG



6.) After finishing with all 8 rods you can cover the back and close all the zippers and velcros again.

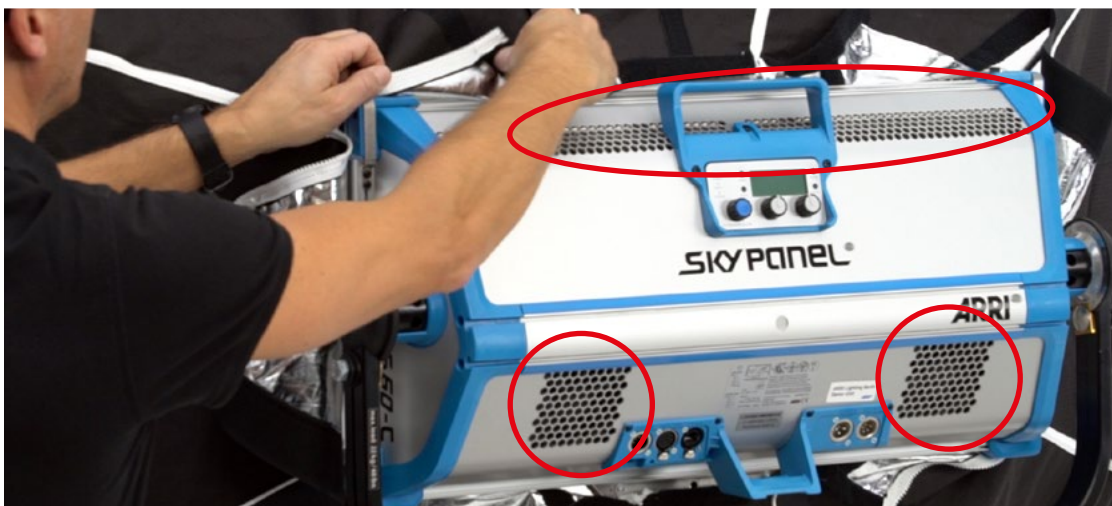

7.) **Caution:**
don't cover any Air
Vents of the Lighting
Fixture.

LANTERN 5 FOR RABBIT EARS

GENERAL SETUP

OPERATING INSTRUCTIONS – BEDIENUNGSANLEITUNG



8.) Use the white elastic strap to bring the Lantern in your preferred shape.

To unmount the Lantern 5 take care that you

- first release the Elastic strap and reduce by the the tension in the lantern.
- secondly open all 4 Zippers and 4 Velcro parts of the backing.
- Then you can release the 8 rod extensions out of the Rabbit ears.
- The rod extensions can stay as one part with the rods.